



1.877.711.1155
UltraSafeUsa.com



Description: Trauma Strap
Model: US-TSC
OSHA: 130-310 lbs. (59-141 kg)
ANSI: Up to 420 lbs (191 kg)



WARNING

These instructions must be carefully read by all individuals who wear or maintain this product, including those who have any responsibility involving the selection, application, use or repair of this product. This product will perform as designed only if it is used and maintained according to the instruction. Otherwise, it could fail to perform as designed, and persons who rely on this product could sustain serious personal injury.

User Information

Date of First Use: _____

Model: _____

Size: _____

Avoid the effects of suspension trauma with the use of trauma relief straps.

1. Extremely effective, specially designed to help relieve the negative effects of suspension trauma.
2. Compact and light in weight, hence does not hamper the activity of worker while at work.
3. Allows the suspended worker to stand up in his harness to relieve pressure.
4. Easy to attach to the harness with the help of the textile loop and velcro provided.
5. Easy deployment, operation is fool-proof.

It is recommended that the trauma relief straps should be inspected and examined by a competent person for any damage or failure, if the need arises. The observation should be recorded in the equipment record table below. In case damage is observed, the trauma relief straps should be replaced immediately.

Max user weight - 310 lbs.

INSTALLATION

Install each Trauma Relief Strap immediately above where the leg strap meets the side/shoulder strap (as shown).







Step 1. Pass Trauma Relief Strap web loop behind harness strap and pull back around.

Step 2. Pull Trauma Relief Strap pouch through web loop and choke down to harness strap. Pouch must be on outside of harness strap.

Step 3. Secure Trauma Relief Strap snap buckle around harness strap.

Step 4. Repeat steps 1-3 on opposite side.

Step 5. Trauma Relief Straps are now installed and ready to use. Please familiarize yourself with the steps of use on next page.

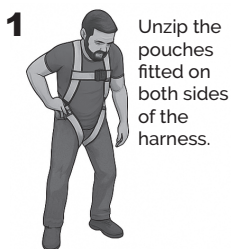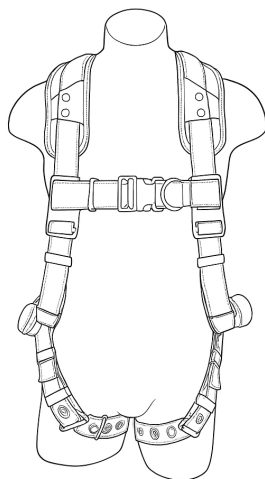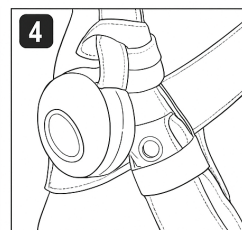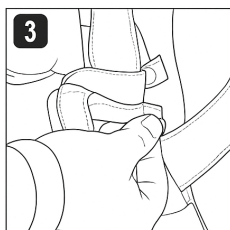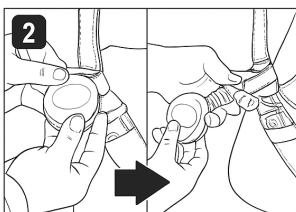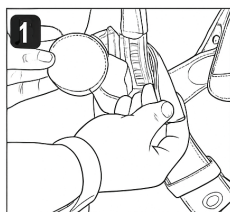

1 Unzip the pouches fitted on both sides of the harness.



2 Hold the two straps together.



3 Connect the straps with each other making a loop with the help of easy to use buckles.



4 Pull your feet into the loop.



5 Step into the loop, so that the thigh straps are free to move.



6 Adjust the seat strap towards the front to release pressure and give a sitting posture.

INSPECTION

Regular Inspection is recommended prior to using this product with harness. It can be used on numerous occasions if it has been inspected prior to use and shows no sign of damage.

MARKING ON PRODUCT

The trauma relief straps are marked with:

- Identification of the manufacturer
- Product code
- Month and Year of Manufacture
- UID for traceability
- Material

HOW TO DISPOSE OF TRAUMA RELIEF STRAPS

When the trauma relief straps become unfit or in case of any wear and tear, dispose of them immediately.

Follow the following steps for disposal:

- Make the three plastic crates namely- Textile, Metal & Plastic for placing the respective components of the trauma relief straps.
- Spread the trauma relief straps on a table or flat surface.
- Inspect the wear & tear present on the trauma relief straps.
- If any wear and tear is observed, dispose of the trauma relief straps using a sharp pair of scissors: first cut the Textile and dismantle the trauma relief straps.
- Put the Textile, Plastic & Metal components in their respective plastic crates.

LIFESPAN

The estimated product Lifespan is 10 years from the date of first use. The following factors can reduce the Lifespan of the product: intense use, contact with chemical substances, especially aggressive environments, extreme temperature exposure, UV exposure, abrasions, cuts, violent impacts, bad use or maintenance.

DISCLAIMER

Prior to use the end user must read and understand the manufacturer's instructions supplied with this product at the time of shipment and seek training from their employer's trained personnel on the proper usage of the product. Manufacturer is not liable or responsible for any loss, damage or injury caused or incurred by any person on grounds of improper usage or installation of this product.

